



CT-04/2200W Commercial 4-Slot Toaster

This manual contains important information regarding your *Admiral Craft* unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty. MUST READ!!!

IMPORTANT NOTICE:
CT-04/2200W 4-Slot Toaster MUST be connected to a dedicated 120V-20A power supply NOTE:
First cycle will take approximately 4 minutes.
You must cycle twice before using.

WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface at least 12" from walls or any other obstruction
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct
- Do not put items on top of oven
- Do not stack ovens

TO USE


1. Confirm that crumb tray is properly inserted.
2. Cycle the toaster twice.
3. Place bread or bagel in the slots.
4. Set browning control and push down the carriage control lever. (You may adjust the knob at any time during cycle)
5. To stop toasting mid-cycle, just lift the carriage control lever.
6. Once toast is complete, toast will pop up in the slots.
7. Never use the toaster when the crumb tray is not in place

CLEANING – NOTE: To maintain cleanliness and increase service life, the oven should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock


- Disconnect the power cord from the electrical outlet.
- Allow unit to cool down.
- To clean the exterior, simply wipe down with a damp cloth.
- Make sure the toaster surface is completely dry before attempting to use again
- To clean the crumb tray, carefully slide the crumb tray out and dispose of any crumbs
- To remove loose pieces of bread from the slots, turn the toaster upside down and gently shake.
- Never insert metal or sharp objects into the toaster slots.
- To avoid damage, do not use abrasive cleaners or scouring pads.
- If soap or chemical cleaners are used, be sure they are completely rinsed away with clear water immediately after cleaning. Chemical residue could damage or corrode the surfaces of the unit.

PARTS

- 1 – Electronic Browning Control
- 2 – Slide-Out Crumb Tray
- 3 – Toaster Slot
- 4 – Carriage Control Lift Lever

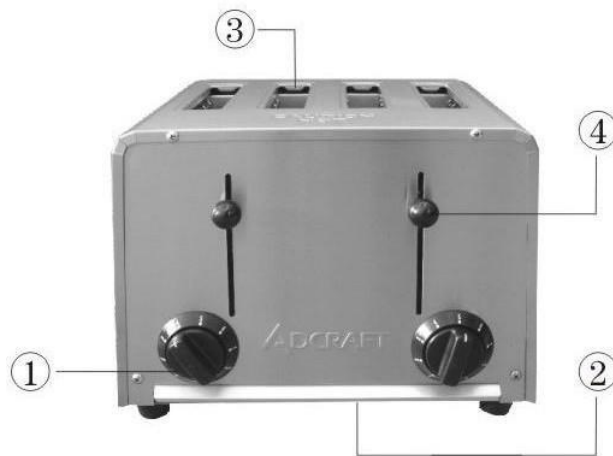


CIRCUIT DIAGRAM

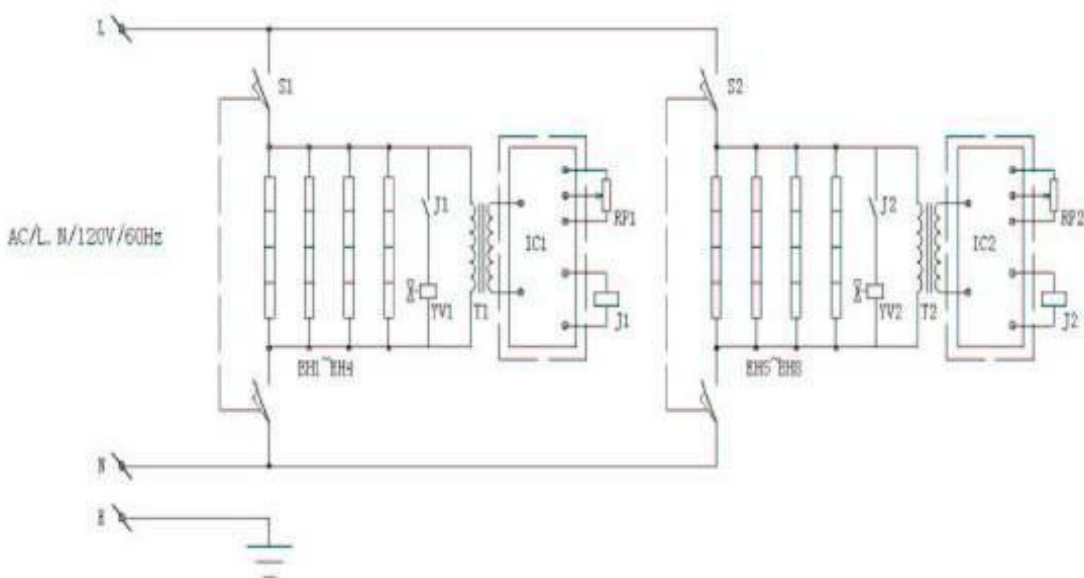


- S1, S2-----Limit Switch
- T1, T2-----Potential Transformer
- RP1, RP2-----Potential Device
- YV1, YV2-----Electromagnet
- IC1, IC2-----Control Panel
- EH1~EH8-----Heating Element

PART A

CT-04/2200W

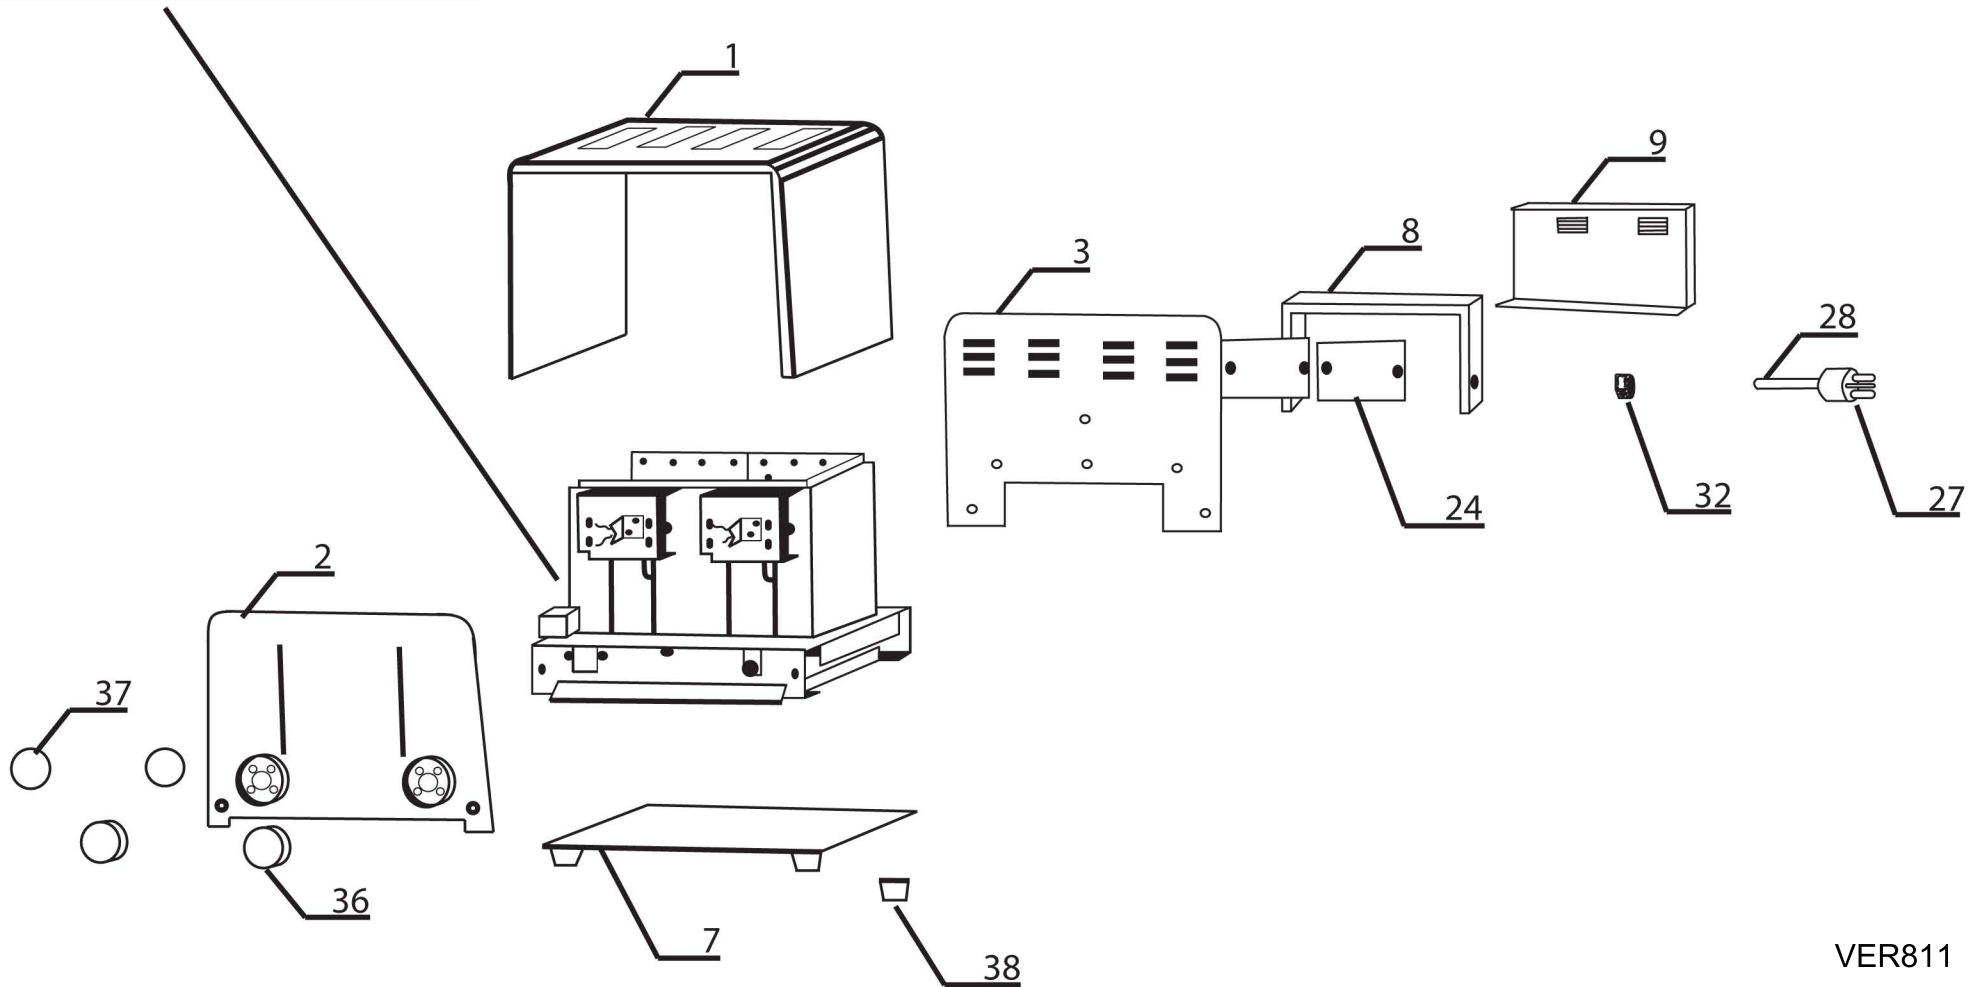

CT-04/2200W

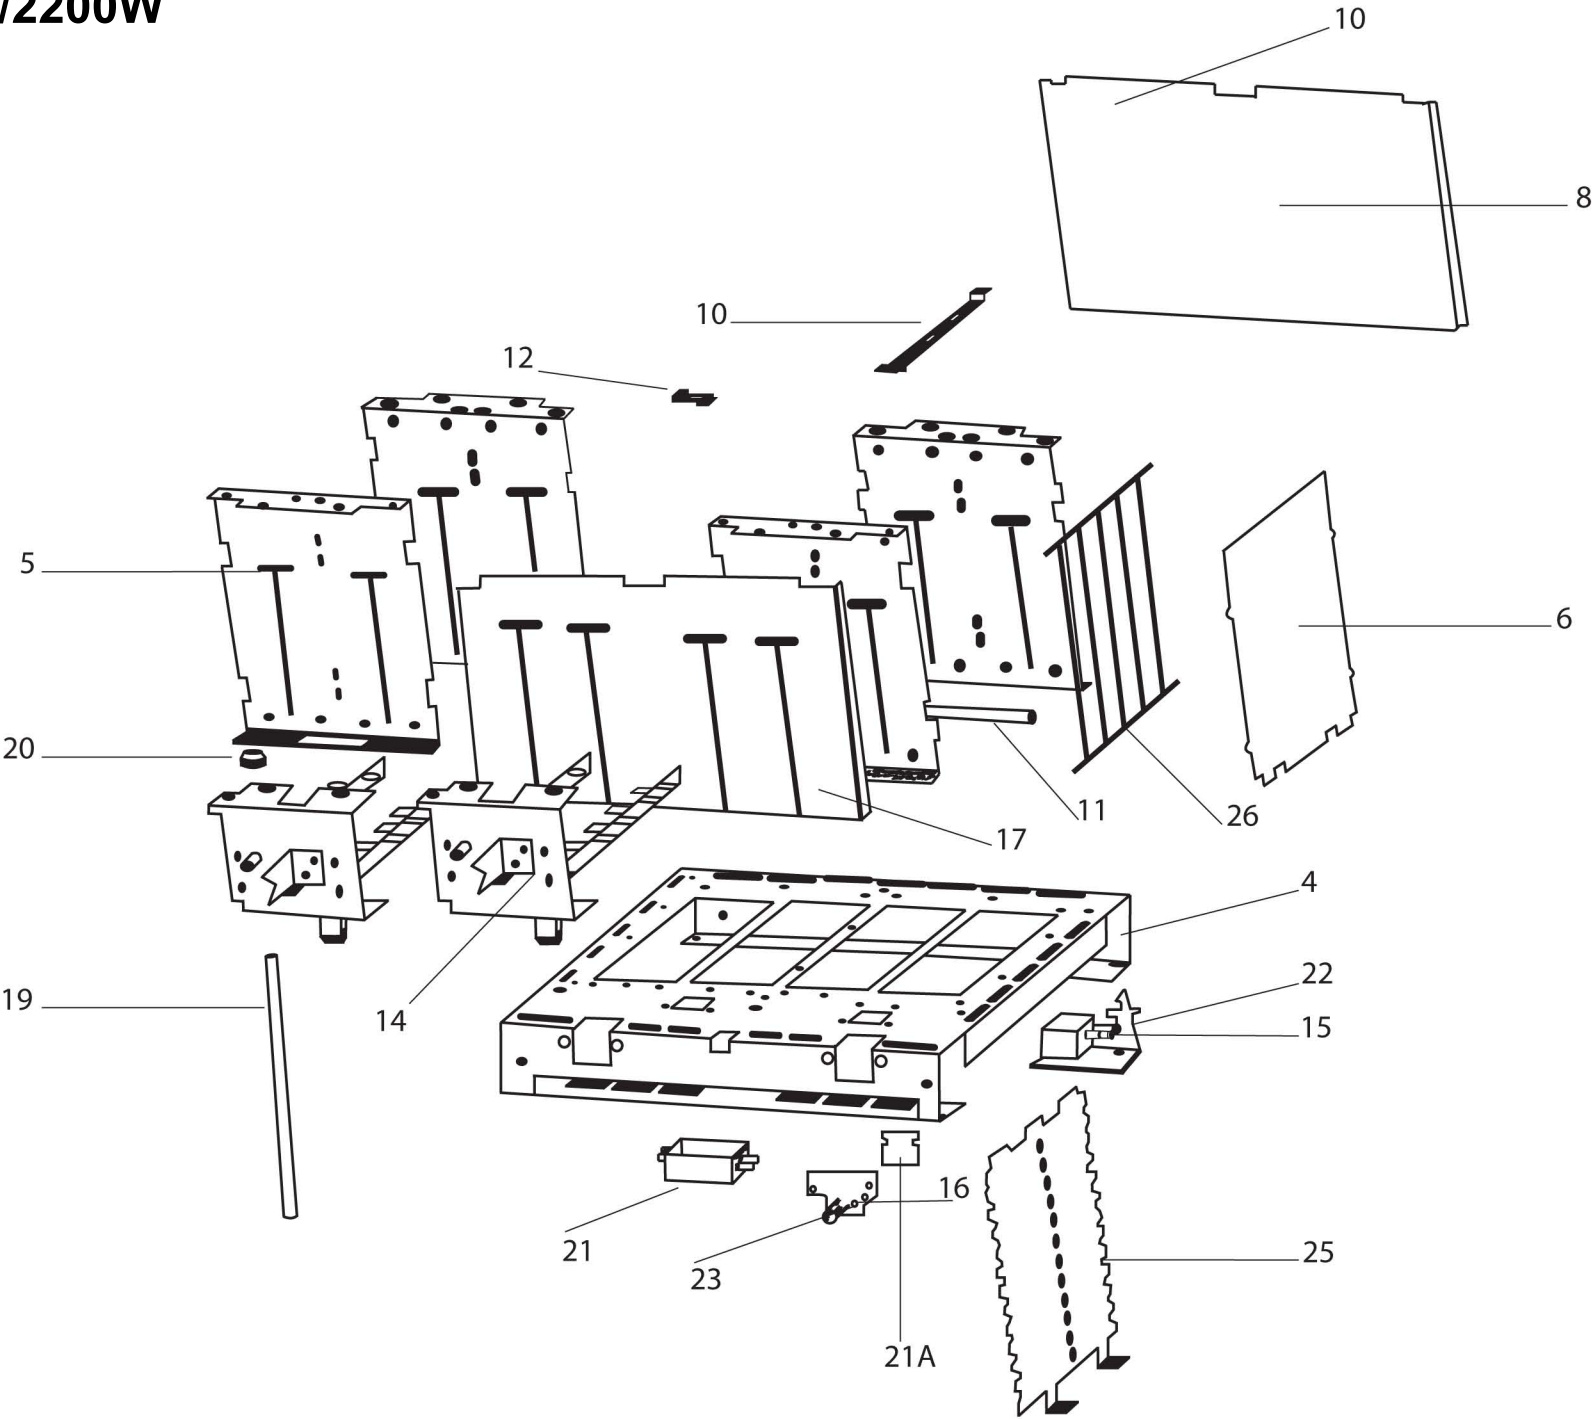

Commercial Toaster - CT-04/2200W

Reference Number	Part Number	Description
1		Body Board
2		Front Board
3		Back Board
4		Inside Base
5		Inside Front/Back Plate
6		Splitter Plate
7		Bottom Board
8		Circuit Box
9		Circuit Box Cover
10		Heater Fixer (Up)
11		Heater Fixer (Down)
12		Inside Connector
13		Crumb Tray
14		Lift Lever
15		Solenoid Base
16		Potentiometer Fixer
17		Front Heat-Insulating Plate
18		Back Heat-Insulating Plate
19		Shaft
20		Plastic Shaft Hoop
21	CT4-21	Switch
22	CT4-22	Solenoid
23	CT4-23	Potentiometer
24		Circuit Board
25	CT4-25	Heater
26		Wire Frame
27	CT4-27	Power Cord
29		Spring 1
30		Spring 2
31		Spring 3
32	CT4-32	Line Clamp
33		Copper Connector
34		Terminal Block Connector
35		Wiring System
36	CT4-36	Knob
37	CT4-37	Handle Ball
38	CT4-38	Feet

ACE Electrical Equipment One Year Warranty

ACE warrants its equipment against defects in materials and workmanship, subject to the following conditions: This warranty applies to the original owner only, and is not assignable.

ACE Electrical Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt, or other proof of purchase is required to obtain warranty coverage.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts where usage, wear, or lack of preventative maintenance may create abnormal replacement rates, and these parts are excluded from this limited warranty.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage for improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only. Warranty is void if equipment is used in other than a commercial application.

In the event your repair is not covered under the stated warranty provisions, parts are available by calling 1-800-223-7750. Equipment not covered by repair should be picked up from our warehouse facility within 10 business days from notification date. Any and all arrangements and expenses for the return of this merchandise is your responsibility.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”

VER40111